Enrolling Cards/Fobs

Once you have configured the controller, you may start enrolling cards. All new cards must be enrolled into the GV-ASManager before access is allowed. Up to 40,000 cards can be stored using a GV-AS / GV-EV Controller. If a card that was not enrolled is presented to the reader, the message *Access Denied: Invalid Card* will be displayed.

Depending on how many cards you need to program, you can simply add them one at a time or use the batch function to add a group of cards.

4.3.1 Adding a Single Card

- 1. To add one card, use one of these ways:
 - Present the card to the reader. The message Access Denied: Invalid Card is displayed. Right-click the message and select New / Edit Card. The New a Card dialog box appears with card number and code type entered (Figure 4-13). Then follow Step 3 to complete other settings.
 - . On the menu bar, click Personnel and select Cards. This window appears.

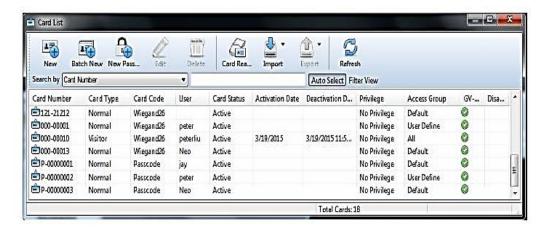


Figure 4-12

Note: You can also enroll card by installing the optional device GV-PCR310 Enrollment Reader to the PC running GV-ASManager. Refer to *GV-PCR310 Enrollment Reader's Installation Guide* for more details.

Click the New button on the toolbar. This dialog box appears.

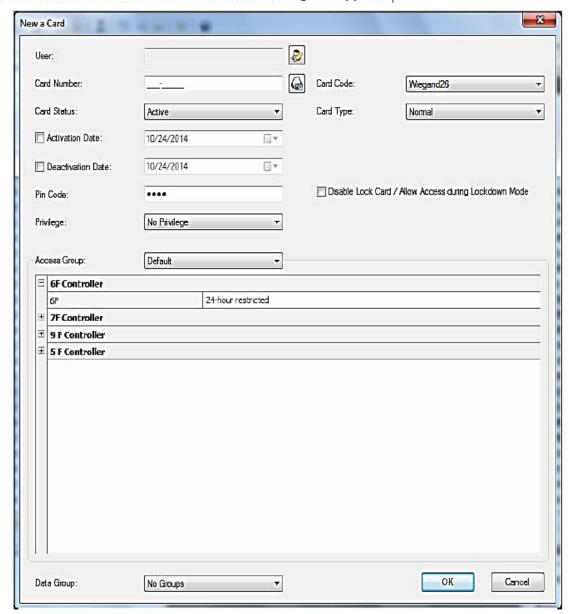


Figure 4-13

- Enter Card Number and Access Group

- Access Group: Access Groups control which personnel can access which door and at what time. For details, see 4.5 Setting Access Groups.

Enrolling Users

On the menu bar, click **Personnel** and select **Users**. The User List window appears. Click the **New** button on the toolbar. This dialog box appears.



Figure 4-26

Type a name under **Display**, which is a required field. Other user information such as Employee ID, Photo, Home information and Company information are optional entries.

Click Add a new card / vehicle to create a new card / vehicle for the user